

Barista Apron

Designed by Robert Kaufman Fabrics

Featuring
METRO CAFE



Finished Apron is one size fits most

Pattern Level: Experienced Intermediate

"I know the ropes and would like to test my skills!"

ROBERT KAUFMAN
F A B R I C S

Fabric and Supplies Needed

Color	Fabric	Name/SKU	Yardage	Color	Fabric	Name/SKU	Yardage
	A	ACF-15022-184 CHARCOAL	1/4 yard		C	S323-1178 INDIGO	1-1/3 yard
	B	K001-1019 BLACK	1/4 yard	You will also need: 3-1/2 yds cotton braided tape Four size 4 Metal Grommets (1/2" opening) Grommet setter			

Notes Before You Begin

- Please read through all of the instructions before beginning.
- All of the seam allowances are 1/2" unless otherwise noted.
- Width of fabric (WOF) is equal to at least 42" wide.
- Press all seam allowances open after each seam is sewn, unless otherwise noted.
- Remember to measure twice and cut once!

Pattern Printing

- Print pages 6-8 at 100%. Tape together along the dashed lines and cut out along the solid black line and solid red line.

Cutting Instructions

Fabric A

- Fussy-cut two rectangles 5-3/4" x 5-3/4" (You will cut 1/4" or less just outside the white frame.)

Fabric B

- Cut one rectangle 10" x 18-1/2".
- Cut one from the pattern piece on the fold. Be sure to read the instructions on the pattern piece. You will measure 25" down from the bottom of the pattern and that will be your cutting line.




Fabric C

- Cut five 2" strips on a 45° angle.

Assembly Instructions

Step 1: Make the Pocket

- Mark the vertical center of the Fabric B rectangle using a fabric marking tool.
- Place the Fabric A squares, right side up, on the darker side of the Fabric B rectangle. The squares will be placed 2-3/4" from the top edge of the rectangle and 1" from the marked center line (fig. 1).
- Sew around the perimeter of the squares using a zig-zag stitch.
- Fold the top edge of the Fabric B rectangle over 1/2" and then 1/2" again to encase the raw edge. Press and sew down. Topstitch 1/8" from the edge (fig. 2).
- Fold the remaining three raw edges of the rectangle 1/2" to the wrong side of the fabric and press.
- Place the rectangle on the lighter side of the Fabric B Apron piece. You will center the rectangle on the apron, 16" down from the top edge (fig. 3).
- Edgestich along the sides and bottom, leaving the top open, and then sew a generous 1/4" in from the line of edgestitching (fig. 4).
- Sew 1/4" from either side of the center line to form two separate pockets (fig. 4).

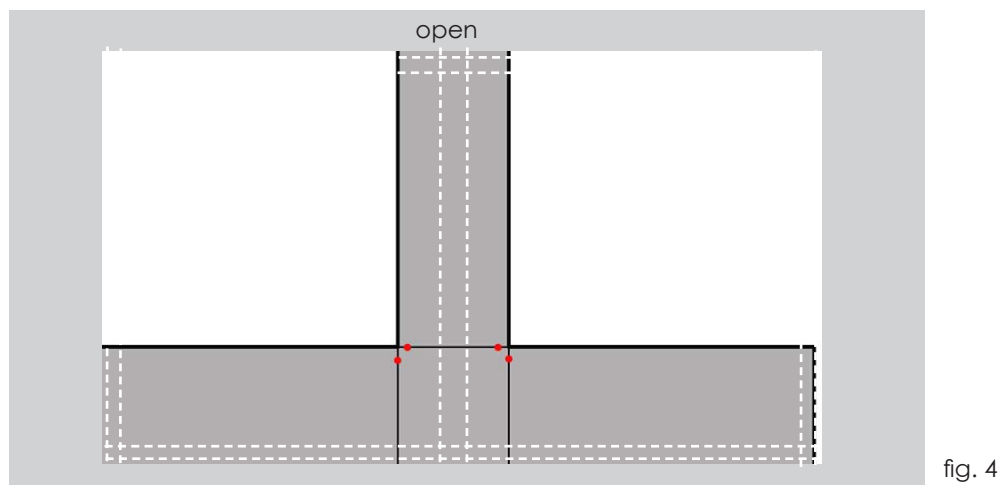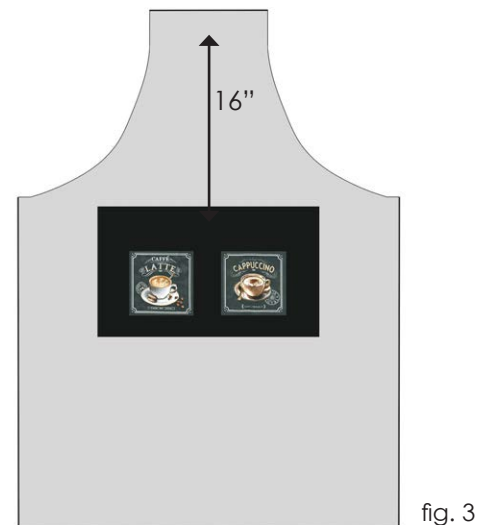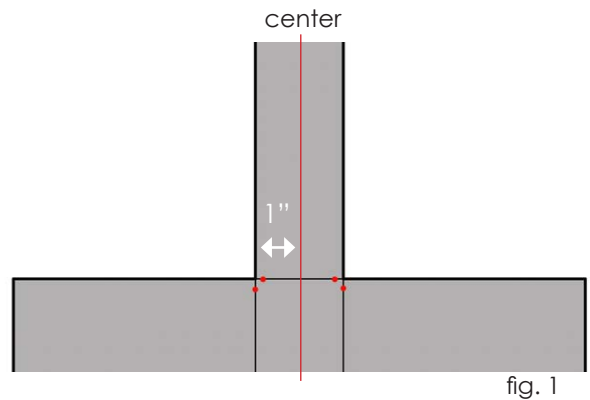

Step 2: Make and Sew the Bias Tape

- **Make 1/2" double fold bias tape:** Sew the Fabric C strips together along the diagonal edges, to make one long strip. Press the strip in half lengthwise and then open the strip back up. Fold and press the edges so that they almost meet in the center. Refold the strip in half and give it a good, hard, press.
- Sew the bias tape to a curved edge of the apron, using a 1/2" seam allowance. Fold the tape over the edge and edgestitch it down (fig.5). Repeat for the other curved apron edge. Trim excess bias tape from the ends.

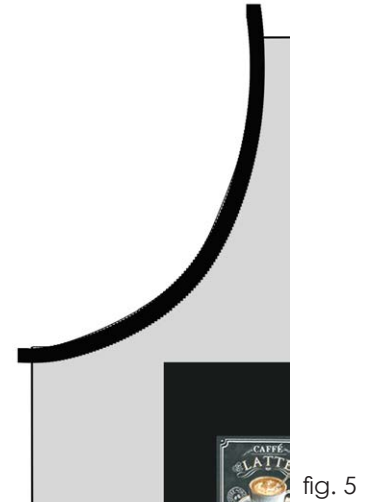


fig. 5

Step 3: Hemming

- Fold the top edge of the apron over 1" and press. Fold over again 2" to enclose the raw edge and press. Topstitch along the edge of the fold, then topstitch again 1/4" up from the first line of stitching.
- Topstitch along the top of the apron and then topstitch again 1/4" down from the previous stitching line. You will have 4 rows of stitching along the hem (fig. 6).



fig. 6

- Fold the sides in 1/2" and then 1/2" again to encase the seam. Press and edgestitch down. Topstitch 1/4" away from the previous line of stitching.
- Fold the bottom edge up 1/2" and then 1/2" again to hem. Press and edge stitch down. Topstitch 1/4" away from the previous line of stitching (fig. 7).



fig. 7

Step 4: Finishing

- Following the manufacturers instructions, set the grommets as pictured (fig.8).

Tip: If you don't have grommets or a grommet setter, you can simply sew the braided tape directly to the apron.

- Cut a piece of braided tape 30" long and thread it through the top holes and tip a large knot at each end. The knots will be on the outside of the apron.

Tip: You may want to try the apron on before you tie the second knot, so you can see how long you would like the neck strap to be.

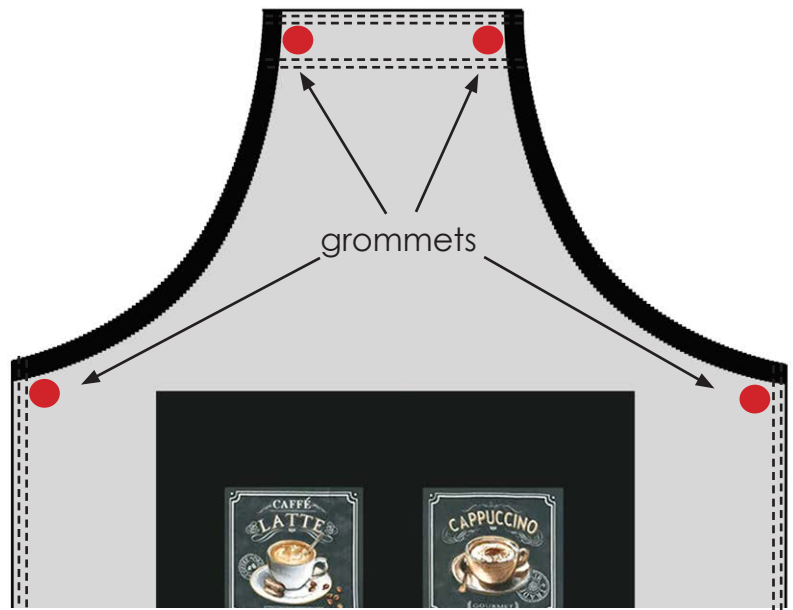



fig. 8

- Cut two pieces of braided tape 45" long and thread each one through the lower grommets. Tie a large knot at each end.

Have fun baking in your new apron!!


Barista Apron Pattern

piece 1 of 3

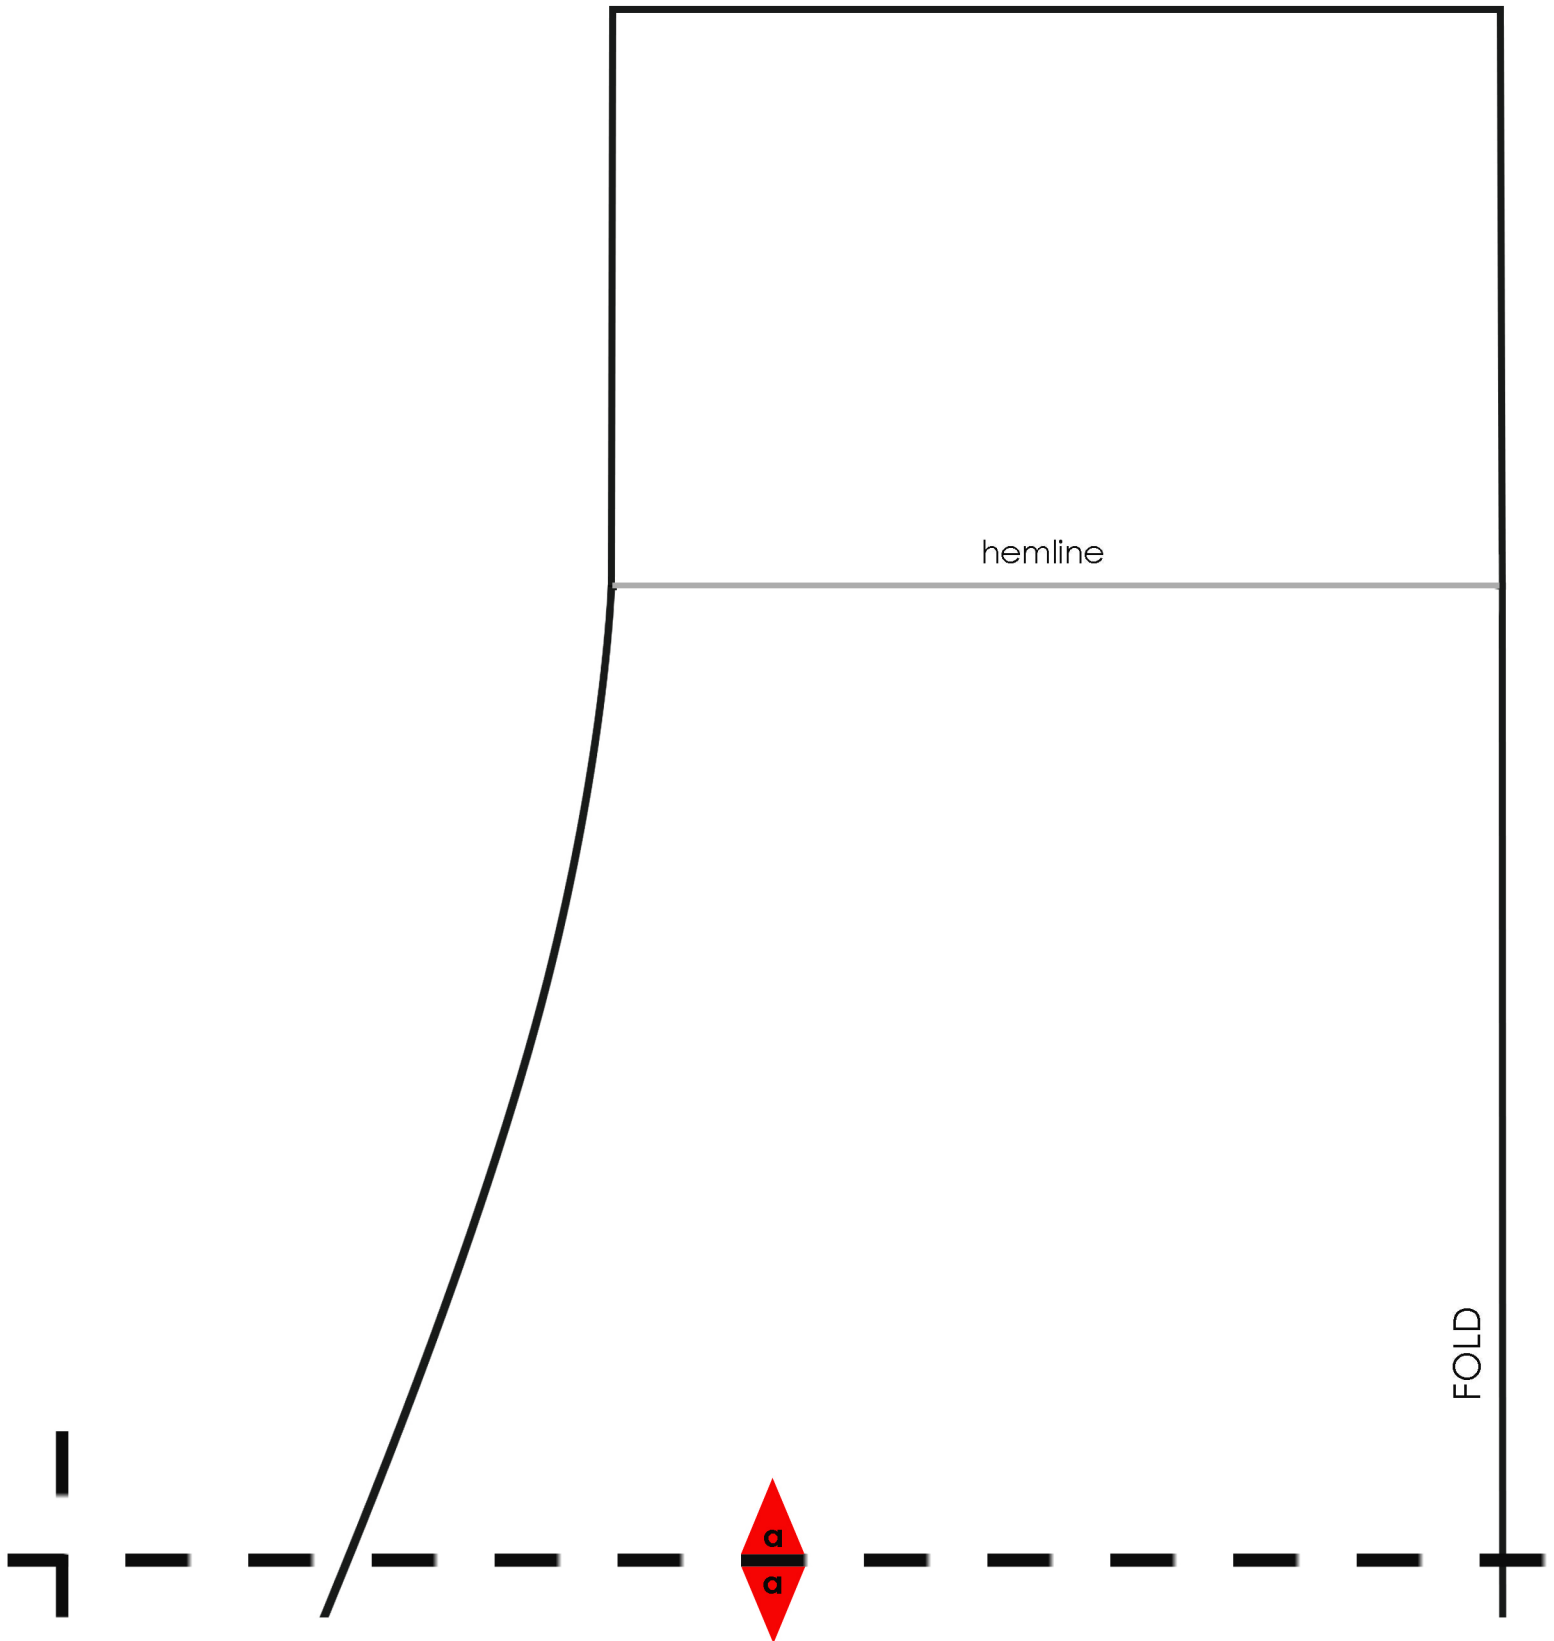

Barista Apron Pattern

piece 2 of 3

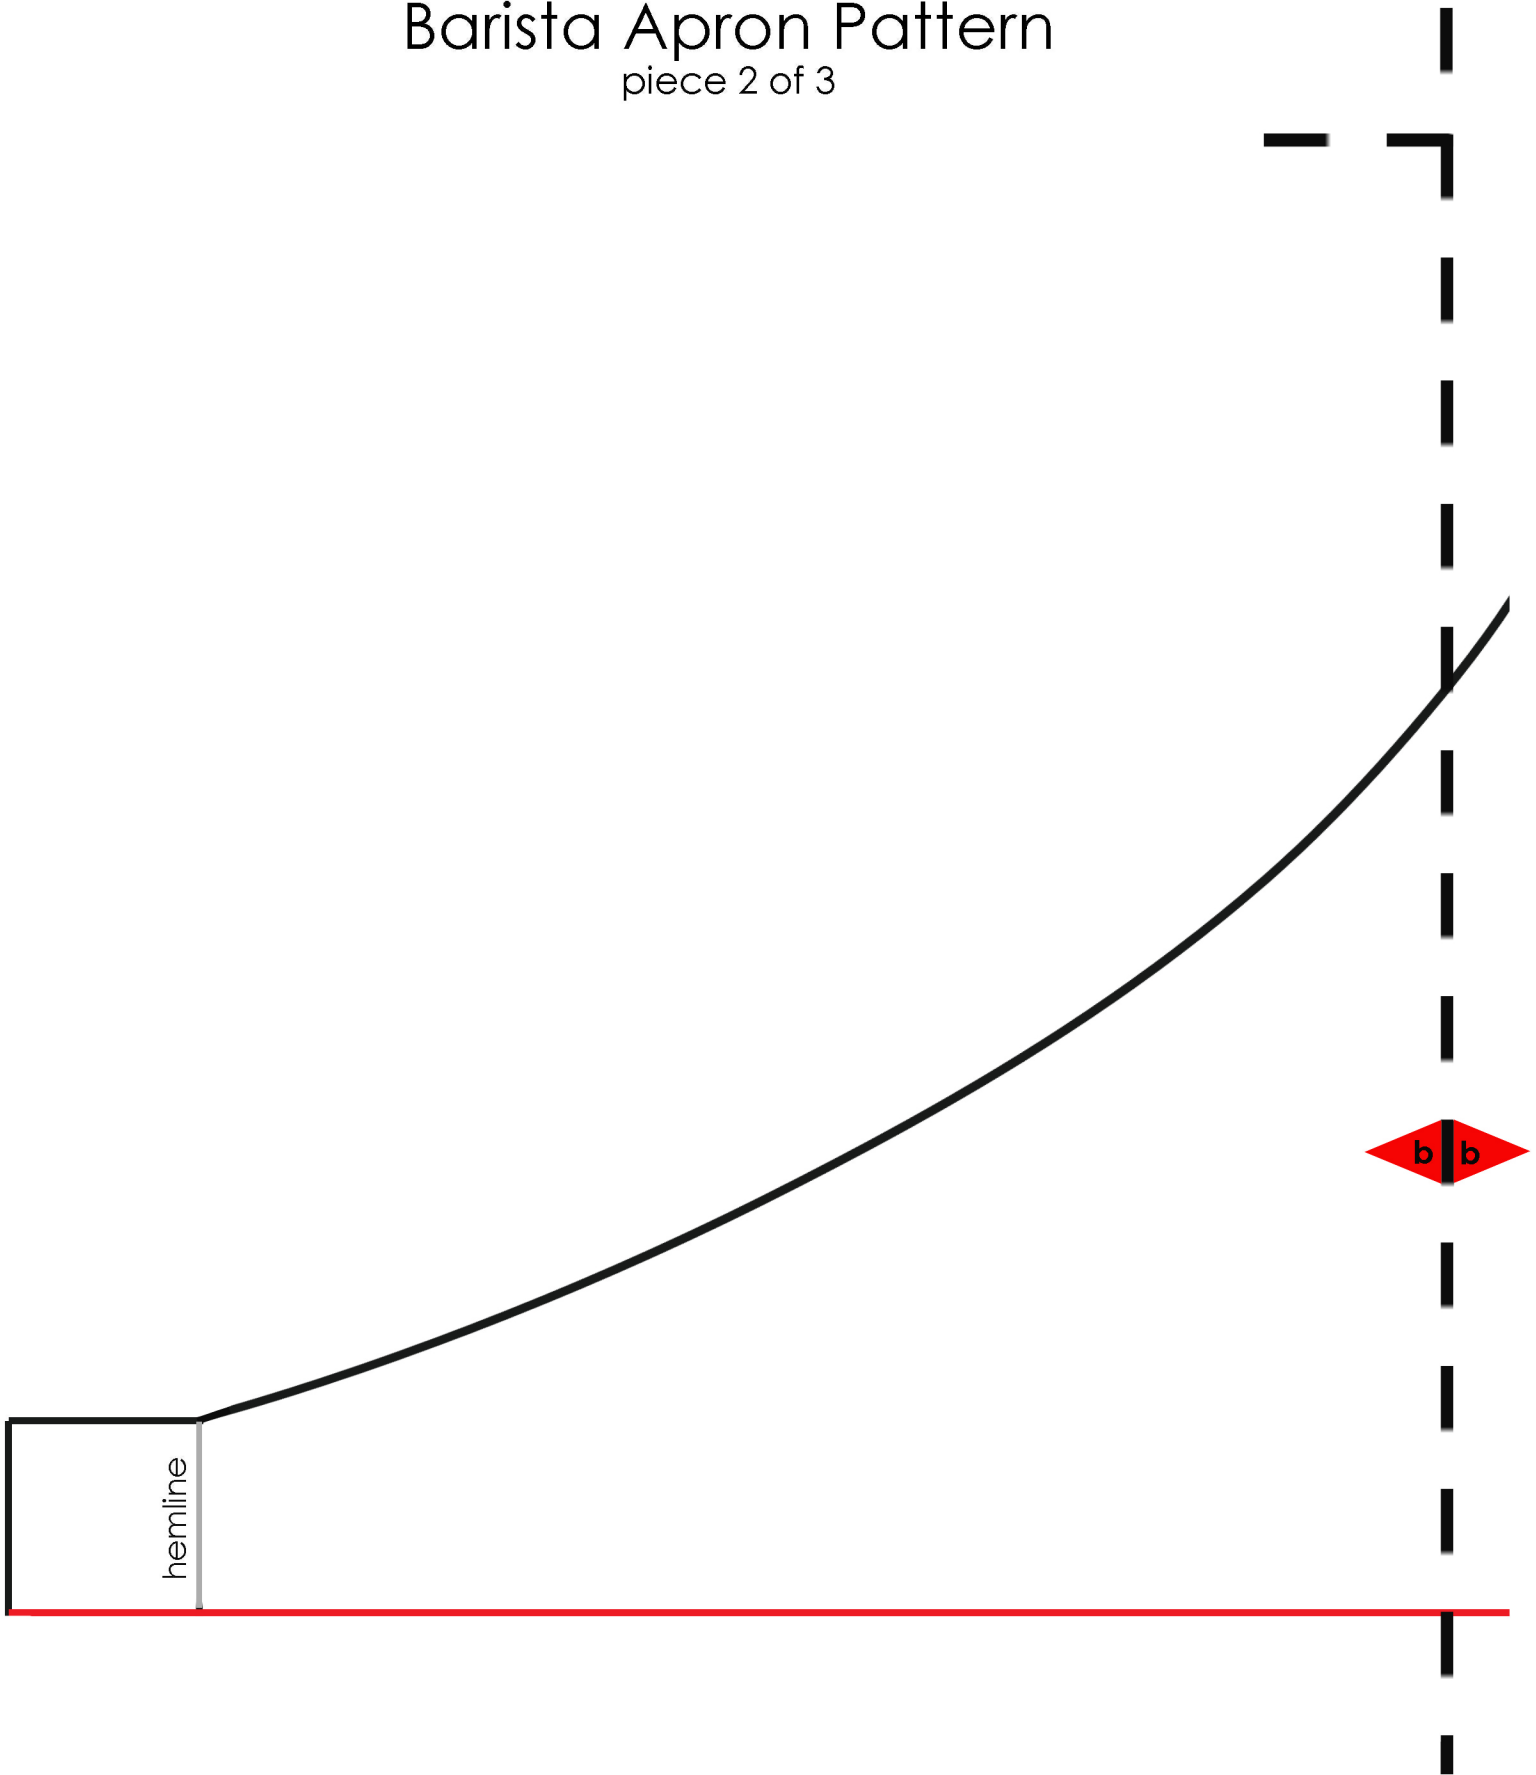

hemline

b b

Barista Apron Pattern

piece 3 of 3

