

LINED APRON

Designed by Robert Kaufman Fabrics
www.robertkaufman.com

Featuring

Blueberry Brunch



Finished size approximately 27" x 27"




Difficulty Rating: **Beginner**

ROBERTKAUFMAN
F A B R I C S

For questions about this pattern, please email Patterns@RobertKaufman.com.

Fabric and Supplies Needed

Fabric amounts based on yardage that is 42" wide.

Color	Fabric	Name/SKU	Yardage	Color	Fabric	Name/SKU	Yardage
	A	SRKD-23281-264 SPA	3/4 yard (for the main exterior)		C	SRKD-23283-1 WHITE	7/8 yard (for the lining)
	B	SRKD-23282-77 BLUEBERRY	3/4 yard (for the pocket, straps and accent)	<p>For individual use only - Not for resale Copyright 2026, Robert Kaufman</p>			

Notes Before You Begin

- Read through all of the instructions before beginning.
- All of the seam allowances are 3/8" unless otherwise noted.
- Press seam allowances open unless otherwise noted.
- Width of fabric (WOF) is equal to at least 42" wide.
- Right sides together has been abbreviated to RST.
- Remember to measure twice and cut once!



Cutting Instructions

From **Fabric A**, cut, following the diagram (*fig.1*)

From **Fabric B**, cut:


- one 5" x WOF strip. Subcut:
 - one 5" x 28" strip for the bottom trim
- three 3-1/2" x WOF strips. Subcut:
 - one 3-1/2" x 26" strip for the neck strap
 - two 3-1/2" x 32" strips for the side ties
- one 7-1/2" x 12" rectangle for the pocket

From **Fabric C**, cut, following the diagram (*fig.2*)

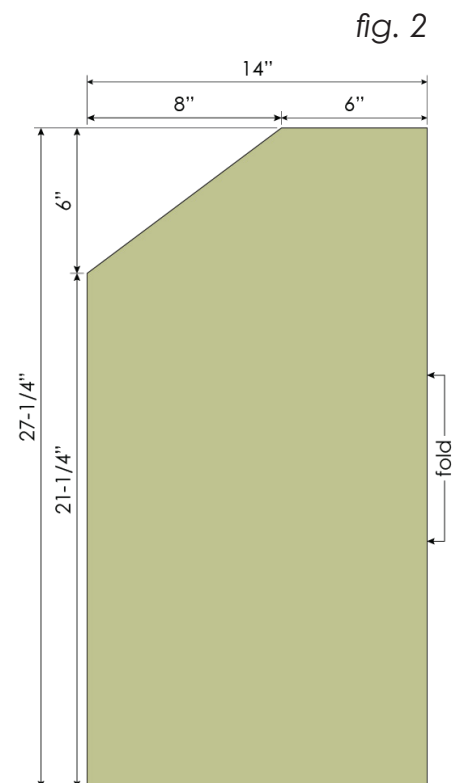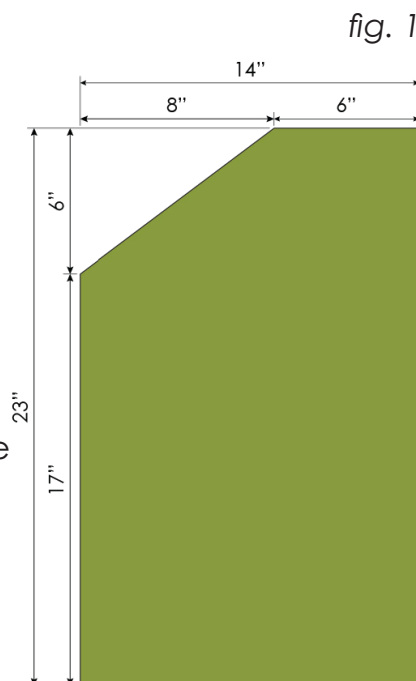

Assemble the Apron Front


Step 1: Place the 5" x 28" Fabric B trim right sides together and the bottom edge of the Fabric A main apron. Sew, then press toward the Fabric B rectangle. Top stitch along the seam, on Fabric B.

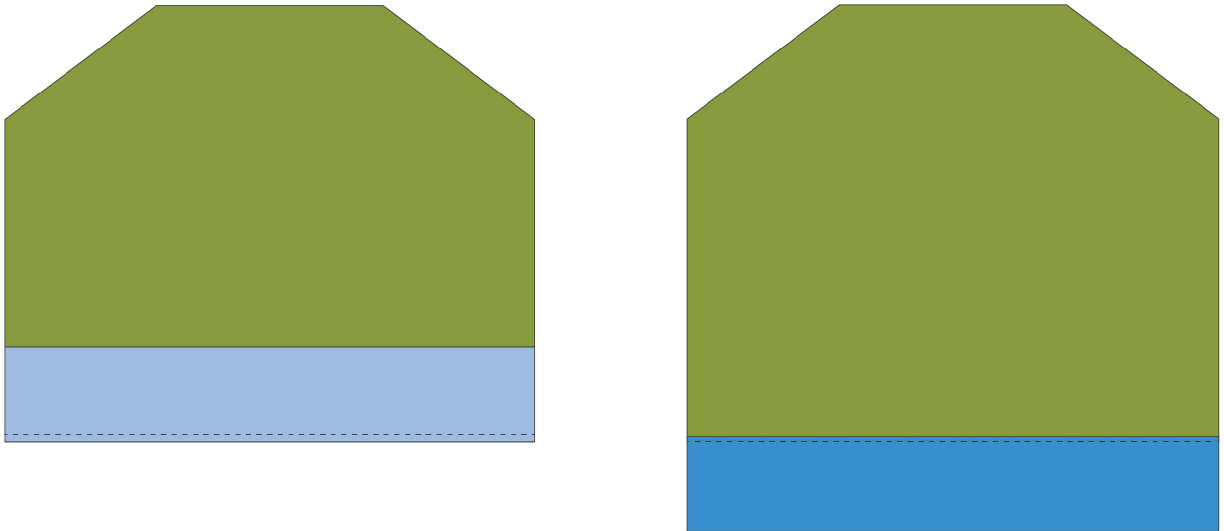

Step 2: Fold the top edge of the Fabric B pocket 1/4" to the wrong side and press. Fold another 1/4" and press, then edge stitch along the top to secure the fold. Fold the remaining two side edges and the bottom edge 1/4" to the wrong side and press.



Step 3: Measure up 11" from the bottom edge of the apron front and place the pocket in the center. Tip: Fold and finger press the pocket and align this crease with the crease left in the center of the apron panel to help center the pocket. Edge stitch the side edges and the bottom of the pocket, reinforcing the top corners with extra stitching. Stitch a line in the center of the pocket to create two pockets.

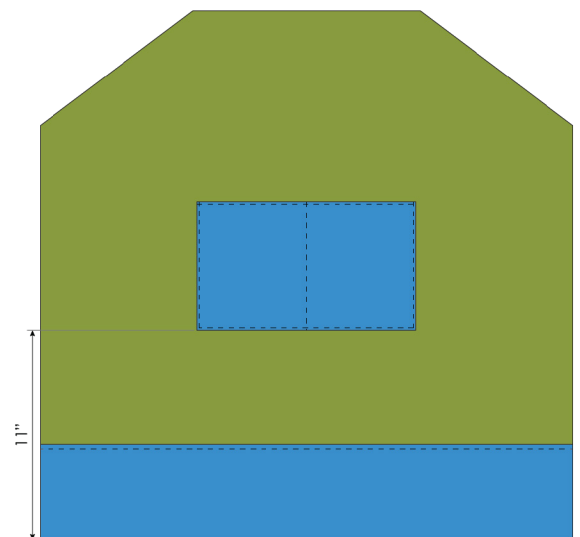


Assemble the Ties

Step 4: Fold the 3-1/2" x 26" Fabric B neck strap strip in half along the longest edges, right sides together. Stitch along the long edge, then turn right side out. Press and set aside.




Step 5: Fold the 3-1/2" x 32" Fabric B side tie strips in half along the longest edges, right sides together. Stitch along the long edge and one short edge, then turn right side out. Press and set aside.



Assemble the Apron


Step 6: On a flat work surface, place the main apron panel right side up. Place the neck strap at the top edge of the apron, with raw edges aligned and the ends of the strap 1/2" in from the corners. Pin in place, taking care to not twist the strap. Optional: baste in place.

Place the side ties at the side edges of the apron, with raw edges aligned and the ends of the ties 1/2" below from the side corners. Pin in place. Optional: baste in place.

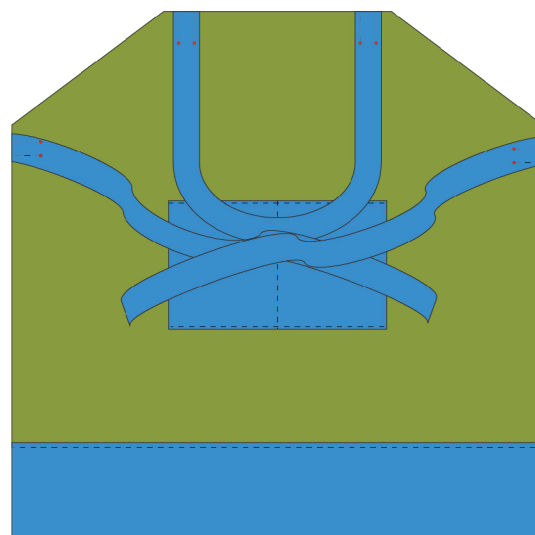

Step 7: Place the Fabric C lining panel on top of the assembled front panel, right sides together. Ensure that the ties and strap are all tucked in between the main panels. Sew around the entire project, leaving a 6" opening along the bottom edge for turning. Turn right side out, then fold and press the raw edges of the opening to align with the rest of the apron's bottom edge. Press around the edges of the entire apron, then edge stitch around the apron, securing the opening.

Your apron is complete! Enjoy!

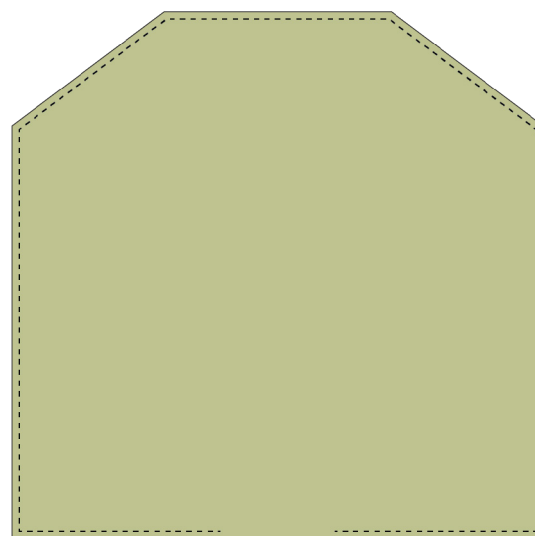

This pattern may be used for personal purposes only and may not be reproduced in any form without the express permission from Robert Kaufman Fabrics. This pattern is not for resale. All patterns, unless otherwise attributed, are © Robert Kaufman Co., Inc. 2005-2024. All rights reserved.